




CASUARINA COVE

BBQ OPERATING INSTRUCTION

DO NOT REMOVE




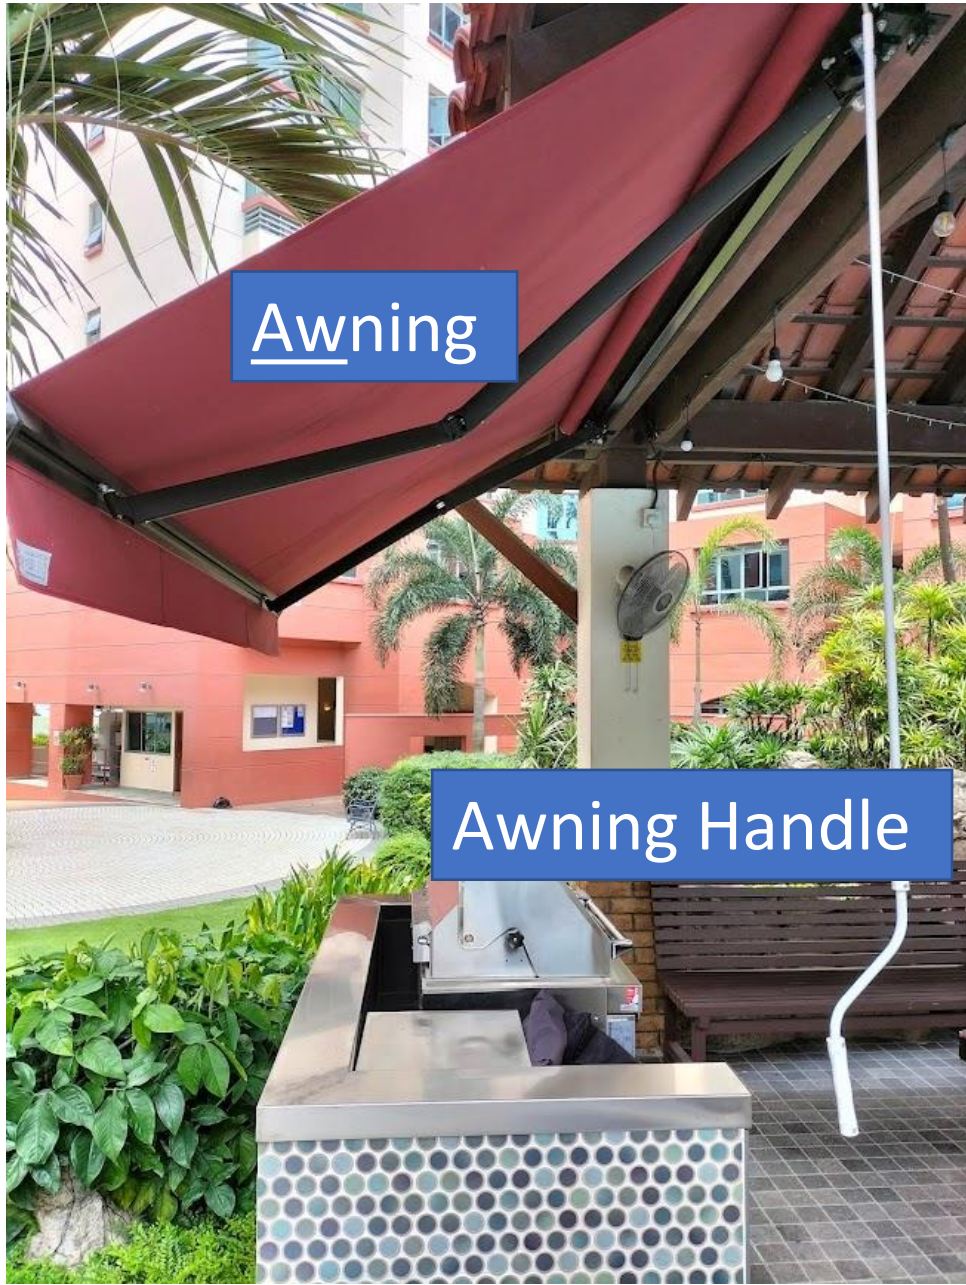

Awning

Awning Handle

Awning is to be used only when it is raining

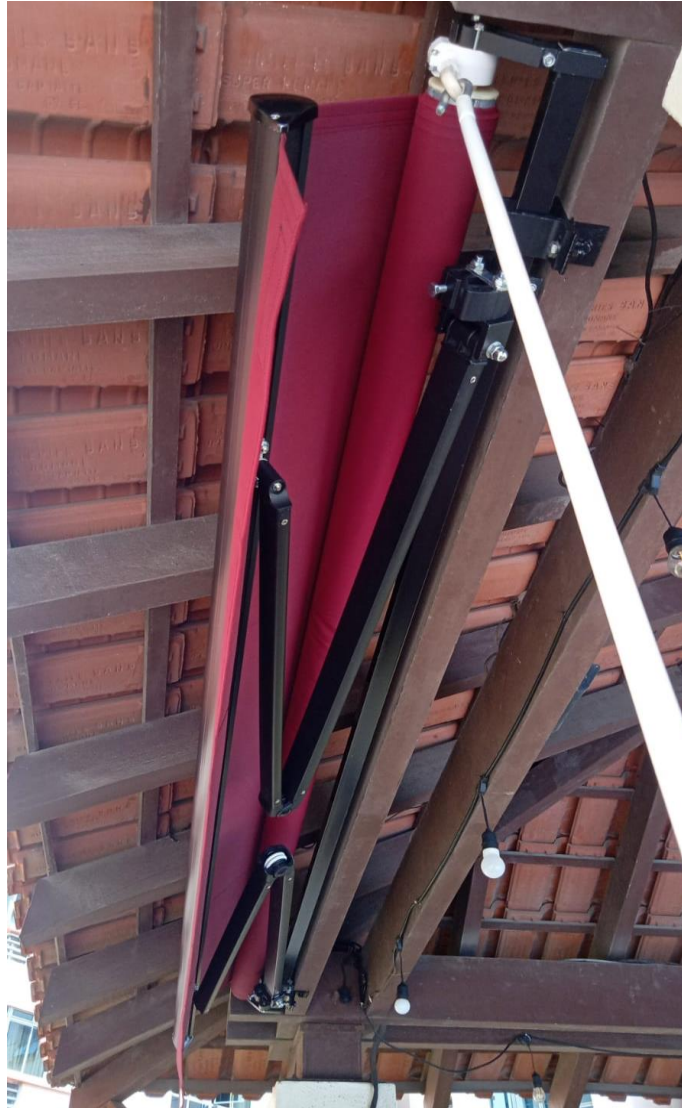

It shall be closed after the rain

Closed position is as shown. DO NOT CLOSE MORE THAN THIS

GAS OFF



Lever sideways

GAS ON



Lever Vertical

# KEY PARTS OF MASPORT BBQ GAS UNIT



Knob lighting  
NOT USED

Ignition Button




Front Burner knob

Rear Burner knob



Rotisserie Motor

# Rotisserie Parts

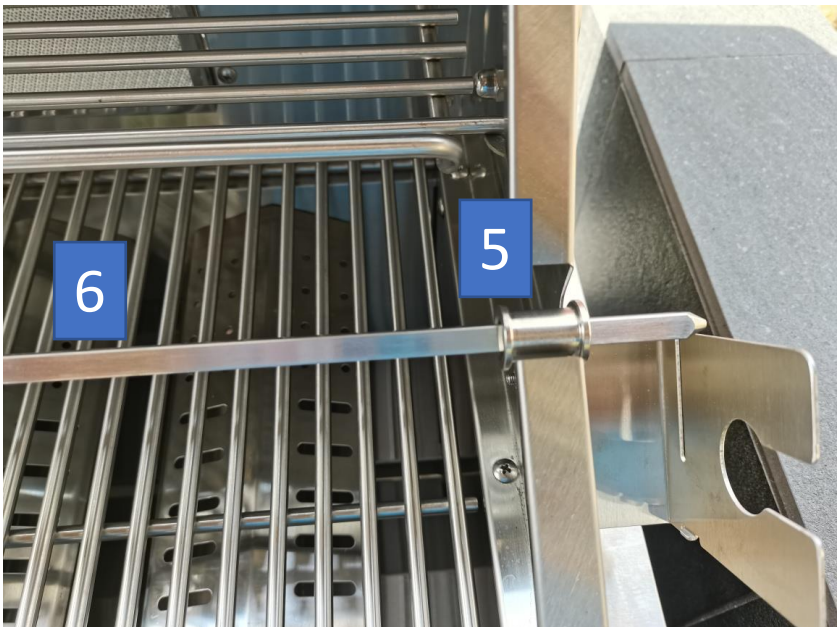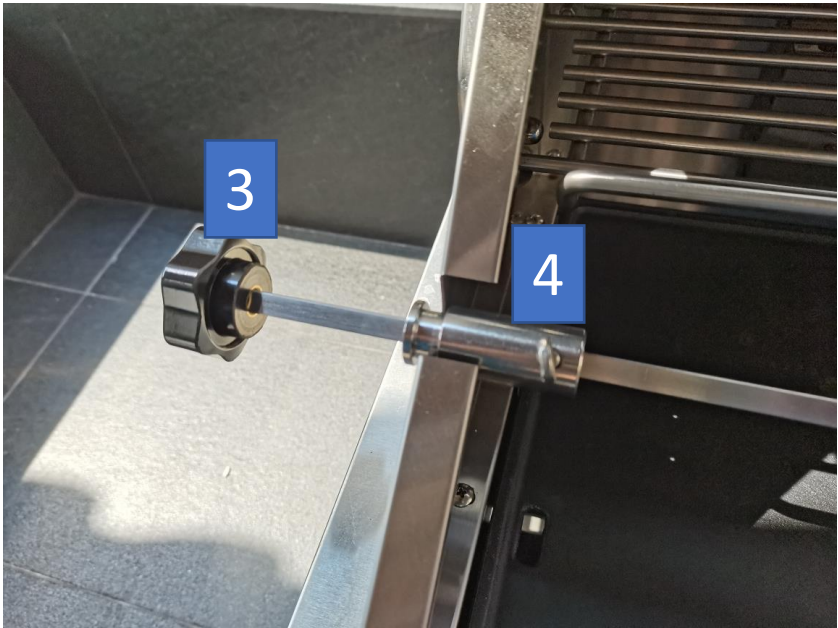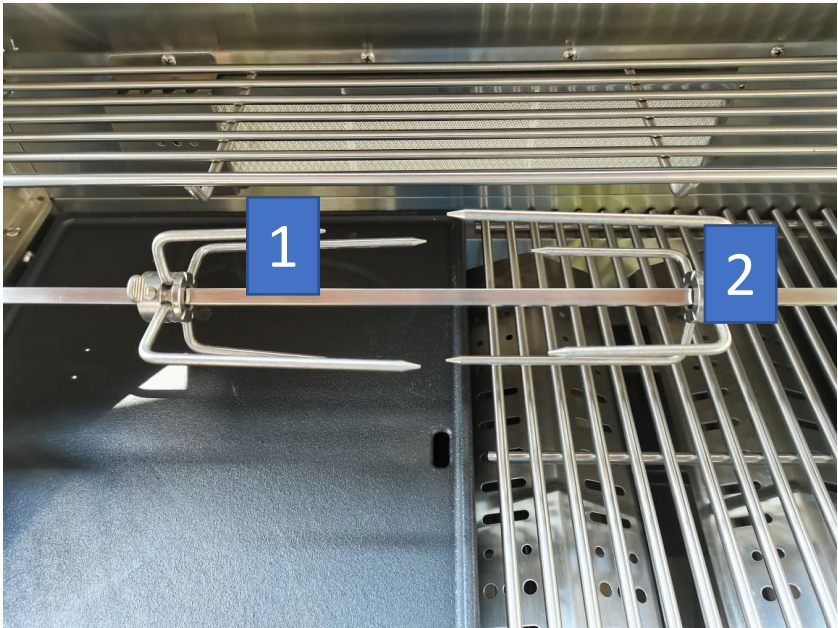



Flame Tamer x 4



# STARTING FIRE FRONT BURNER

1. Turn ONE Front burner knob to HIGH
2. PRESS Ignition Button and hear sparking sound. Watch Flame come on inside the unit and release ignitic button
3. Turn on NEXT burner knob just beside the lit burner and the flame will come on.
4. Adjust burner knob to right flame





## STARTING REAR BURNER



1. Turn the REAR burner knob to HIGH
2. PRESS Ignition Button and hear sparking sound. Watch white rear burner light up
3. **You cannot see the rear burner flame in daylight** so remember to turn knob off after use

Rear burner is used only for warming food or Rotisserie



## SWITCHING CYLINDERS



1



2



Pull regulator off by pulling up the circled lever at the same time.



3

Press regulator down on new cylinder until you hear a click. Shake regulator to ensure it is seated.



4

Turn SWITCH to vertical to on gas

# IGNITION BATTERY REPLACEMENT

Unscrew ignition button and replace with AA battery as shown



1 x 1.5V AA battery needed for ignition. Battery not included. Unscrew igniter button cap by turning counterclockwise. Install AA battery with negative end inserted first. Screw back on the igniter button cap turning clockwise.

